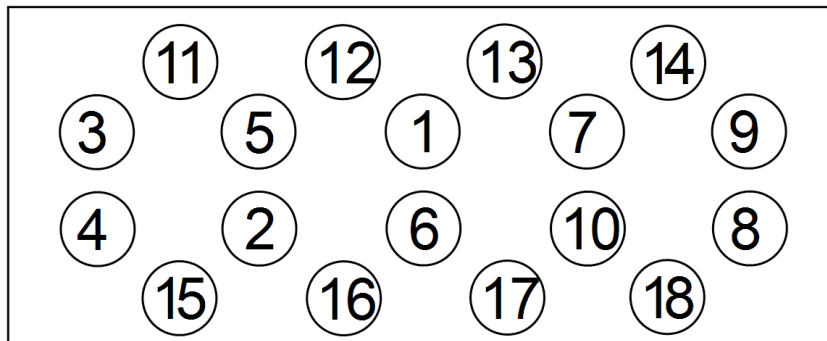


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****690.396**passend für / suitable for  
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

057.590

M 12x1,75x120

Anziehen/  
Tightening/  
Serrage/  
Apriete

- ☉ 1-18:  
30 Nm
- 1-10:  
➤ 75°
- 11-18:  
➤ 50°
- 1-18:  
➤ 75°

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

÷ 1,42 mm Ø 98,5 1 Loch/hole

2,5 CRD / 2,8 CRD 88-120 KW (120-177PS) 16V

Mot. ENR, EDK, R2516, R2816

Chrysler Voyager III, Voyager IV

Jeep Cherokee (KJ), Wrangler

Dodge Nitro

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/01/22

**\*690.396\***