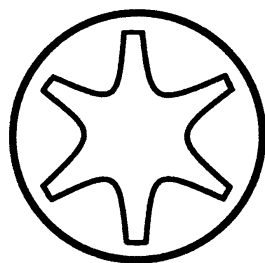


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****825.395**passend für / suitable for  
adaptable à / adaptable a**Opel****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo820.297  
M 11 x 154Anziehen/  
Tightening/  
Serrage/  
Apriete

- ⊙ 25 Nm
- 90°
- 90°
- 45°
- \* 15 min
- 30°
- 15°

## Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

82,5 Ø

Mot. 1,7 l, Diesel (OHC), 4 Cyl. 42 kW (57 PS)

YD (OHC)

Kadett, Vectra 10/1988&gt;, Astra 9/1991&gt;

Astra Diesel 1989&gt;, Belmont Diesel 1989&gt;,

1,5 mm ÷ 2 Löcher / Holes

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*825.395\***