
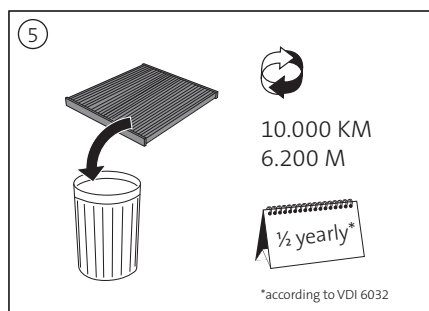
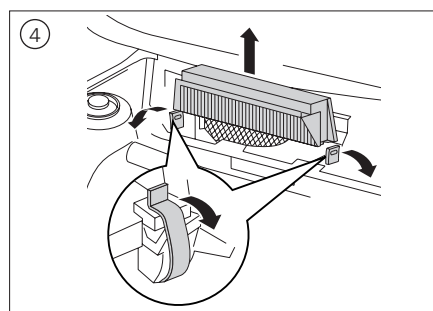
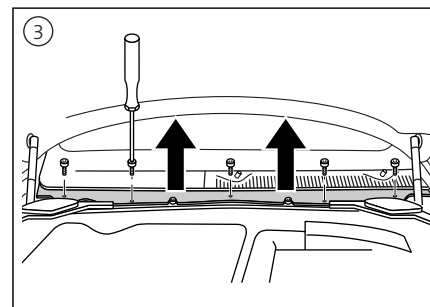
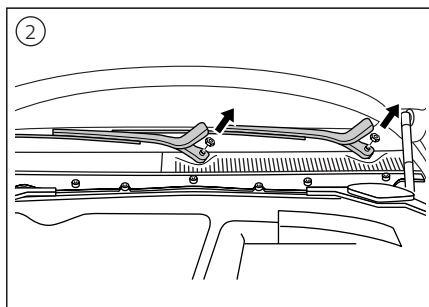


FITTING INSTRUCTIONS  
EINBAUANLEITUNG  
INSTRUCCIONES DE MONTAJE  
NOTICE DE MONTAGE  
ISTRUZIONI DI MONTAGGIO  
INSTRUKCJA MONTAŻU  
INSTRUÇÕES DE MONTAGEM  
ИНСТРУКЦИЯ ПО УСТАНОВКЕ

Ford Mondeo 2001 →  
Jaguar X-Type 2001 →

micronAir® blue

BL597  
CB1089

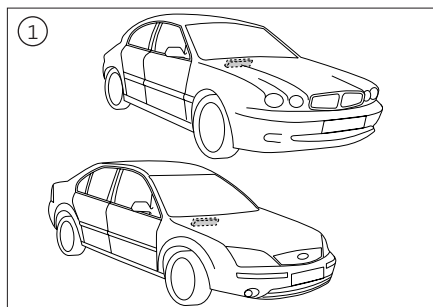

03-CA-532-December-2017-ML